


Necessary preliminary tasks:


- Remove backrest for rear seat
- Remove rear luggage compartment floor trim

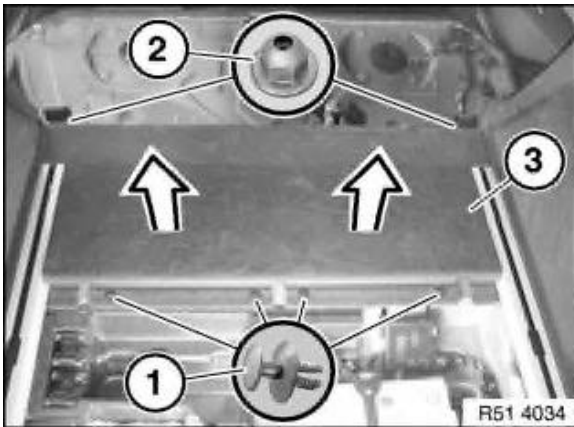

Release expander rivets (1) and nuts (2) and remove trim (3) in direction of arrow.

Installation:

If necessary, replace faulty expander rivets (1) and/or nuts (2).

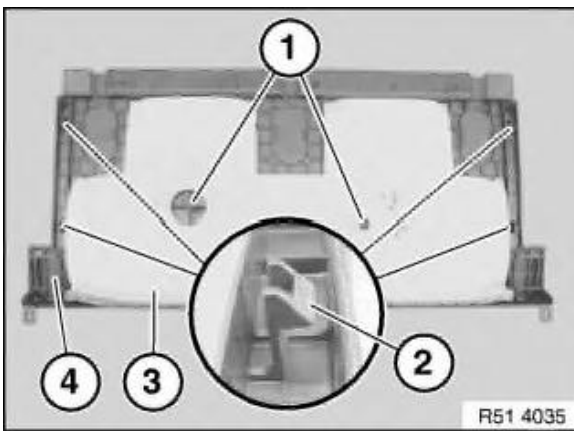

Installation:

Guides (1) and catches (2) on trim (4) must not be damaged.

Replacement:

If necessary, detach sound insulation (3) from trim (4) and fit on new part.