


Carry out following tasks beforehand:

- Remove armrest side section on rear seat backrest
- Remove center seat belt (lower fastening)

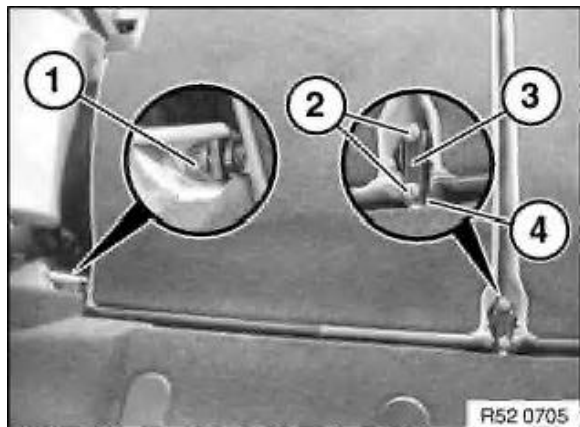

Fold down backrests.

Release screws (1) of outer mount.


Release screws (2) of center mount.

Remove center mount (3).

Installation:

Correctly place center mount on bearing pedestal.

If necessary, replace faulty outer mount.

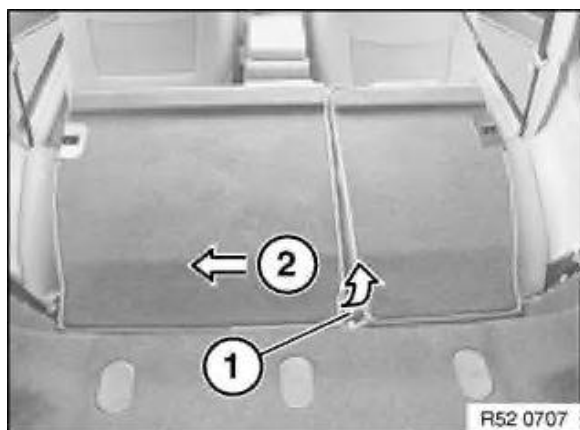

Lever both backrests out of center mount (1) and pull out left backrest (2) towards left. In the process, mounting shaft of right backrest is pulled out of left backrest.

Remove left backrest (2) from vehicle.

Note:

- Removal of both backrests:
Release screws on outer mount of right backrest and remove backrest.
- Removal of right backrest:
Proceed in mirror-inverted fashion to left backrest.

Installation:

Bearing bushings (1) must not be damaged.

Replace faulty bearing bushings.

