

7618

Remote-On
(Blu/Wht)

5957S / 5959S

Optical Fiber Cable
Digital Output

Battery Lead (Yel) Fuse Holder (7.5A)

Remote-In (Blu/Wht)

Ground (Blk)

A

B

ALPINE 3681
DIGITAL TIME/FREQUENCY PROCESSOR

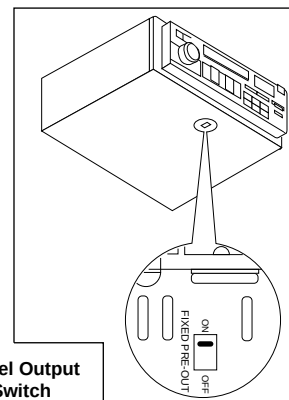
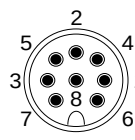
80.00

MODE < BND > SAVE

ADJUST V A

**Fixed Level Output
Selector Switch**

Be sure to set the "Fixed Level Output" switch to the "ON" position! The analog input on the 3681 requires a constant level for the analog to digital converter to function properly. In the "ON" position the volume control knob or the remote control will not change the output level of the Front or Rear outputs.

**A CD Shuttle Controller
DIN Connector****B CD Shuttle
DIN Connector**

1	Data Bus
2	Signal Ground
3	Data Ground
4	Right Signal
5	Left Signal
6	Battery
7	Ignition
8	Power Supply Ground

