

Car and Key Memory Settings E83 (X3)

“=” - Factory setting

Anti-Theft System	
Interior sensor	= Active
	Not Active
Arming/Disarming	Disarming only with remote control
	= Locks and remote control
Tilt Sensor	= Active
	Not Active
Acknowledgement – Vis. lock., without antitheft alarm syst.	Active
	= Not Active
Acknowledgement – disarm visually	= Active
	Not Active
Acknowledgement – arming visually	= Active
	Not Active
Acknowledgement – disarm acoustically	= Active
	Not Active
Acknowledgement – arming acoustically	Active
	= Not Active
Acknowledgement – arm visually, lids closed	Active
	= Not Active
Acknowledgement – arm acoustically, lids closed	= Active
	Not Active
Central locking	
Selective Central Locking	= Selective central locking
	Not Active
Automatic lock after drive off	Active
	= Not Active
Locking threshold	Terminal R
	4 km/h (= 2.5 mph)
	8 km/h (= 5 mph)
	12 km/h (= 7.5 mph)
	= 16 km/h (= 10 mph)
	20 km/h (= 12.5 mph)
	24 km/h (= 15 mph)
	28 km/h (= 17.5 mph)
Lock after unlock. without open.	Active
	= Not Active
Unlocking rear window	Active
	= Not Active
Panic mode	= Active
	Not Active

Car and Key Memory Settings E83 (X3)

“=” - Factory setting

Interior light	= Active
	Not Active
Entrance aid	= Active
	Not Active
Open tailgate	Active
	= Not Active
Power Windows / SHD	
1 touch driver window open	= Active
	Not Active
1 touch driver window close	= Active
	Not Active
1 touch passenger window open	= Active
	Not Active
1 touch passenger window close	= Active
	Not Active
1 touch rear window open	= Active
	Not Active
1 touch rear window close	= Active
	Not Active
1 touch open sunroof	= Active
	Not Active
1 touch close sunroof	= Active
	Not Active
1 touch raise sunroof	= Active
	Not Active
Convenience open, remote control	= Active
	Not Active
Convenience closing, remote control	Active
	= Not Active
Lighting	
Interior lights - Soft ON/OFF	= Active
	Not Active
Interior lights – Inter. light on with unlck. via lck.	= Active
	Not Active
Interior lights – Inter. light on with term. R off	= Active
	Not Active
Exterior lights - Daytime running lights	Active
	= Not Active

Car and Key Memory Settings E83 (X3)

“=” - Factory setting

Exterior lights - Home Lights (pathway lighting), time period	Not Active
	= 40s
	90s
	150s
	240s
Autom. driv. lights ctrl. (Set of threshold values)	= Sensitive
	Normal
Heating / A/C / Ventilation	
Fan - Fan correction (increase/decrease by 10%)	= Not Active
	Increase
	Decrease
Vents - Flaps set point valve correct.	= Not Active
	+3 degrees
	+2 degrees
	+1 degrees
	-1 degrees
	-2 degrees
	-3 degrees
Vents – Rear window defroster	Active
	= Not Active
Vents – Close footwell flap	= Active
	Not Active
Vents - recirculated air memory	= Active
	Not Active
Vents - A/C mode on when ignition turned on	Active
	= Not Active
Seat and Mirror Memory	
Seat adjustment	= Not Active
	After unlocking and door opening
	After unlocking with remote control
Autom. Kerb view park.funct.	= Not Active
	Active
PDC	
Switch – on signal	Active
	= Not Active
Windshield Wipers	
Rain sensor	= Active
	Not Active

Car and Key Memory Settings E83 (X3)

“=” - Factory setting

Displays/Language	
Units - Consumption	Liters/100km
	mpg (UK)
	= mpg (US)
	km/liter
Units - Distance	Kilometers
	= Miles
Units - Time	= 12 hours
	24 hours
Units - Temperature	Degrees Celsius
	= Degrees Fahrenheit
Basic settings – Temporary ice warning	= Active
	Not Active
Audio/Video	
Key-specif. set. of Audio/Video	Active
	= Not Active