**Special tools required:**

- 00 9 317

**Warning!**

Model with side airbag:


Follow safety instructions for working on cars with airbag systems.

Side airbag is mounted on door trim panel:

Disconnect battery.

Important!

Do not use any sharp-edged tools to remove the panel - risk of damage to airbag.

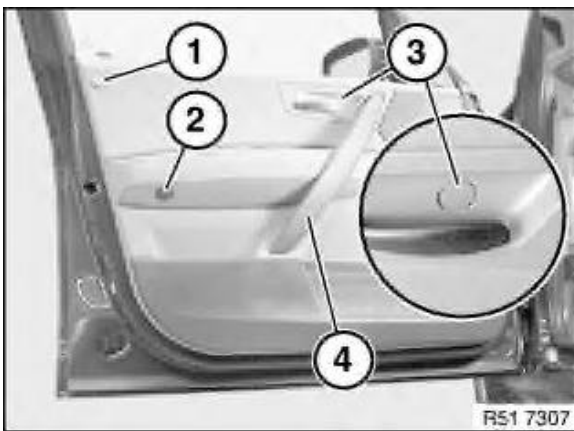


Lever out airbag emblem (1) and clip (2) with special tool 00 9 317 and release screw underneath.

Lever out clip (3) and cover on door handle (4).

Release screws underneath.


Installation:

Tightening torque 51 41 1AZ .

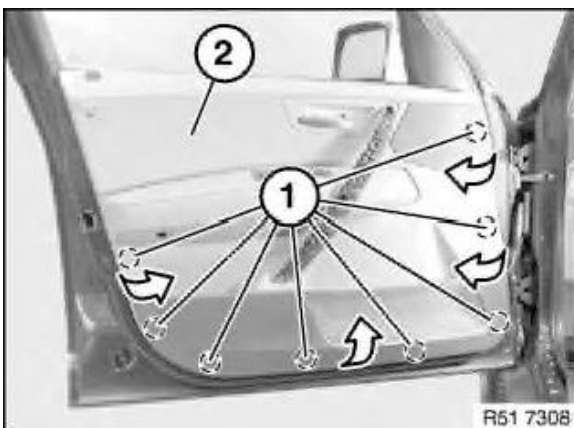
*Note:*

Start by unclipping door trim panel (2) at bottom.

Unclip clips (1) of door trim panel with special tool 00 9 317 (trim panel wedge).

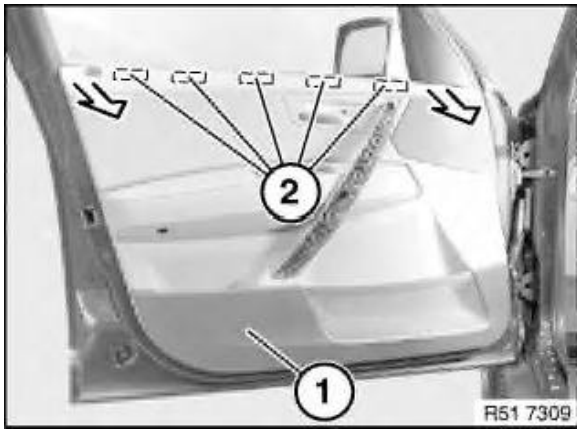

Carefully unclip door trim panel (1) at top from retainers (2).

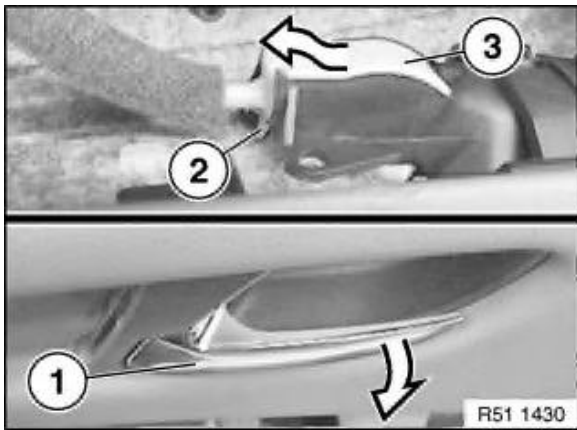

Unhook Bowden cable for release lever:

- Tighten release lever (1).
- Lever out lock (2).
- Detach Bowden cable (3) towards rear/top.

Installation:


For fitting, press release lever (1) fully against door trim.



Model with side airbag:

Warning!

Disconnect plug connection on side airbag.

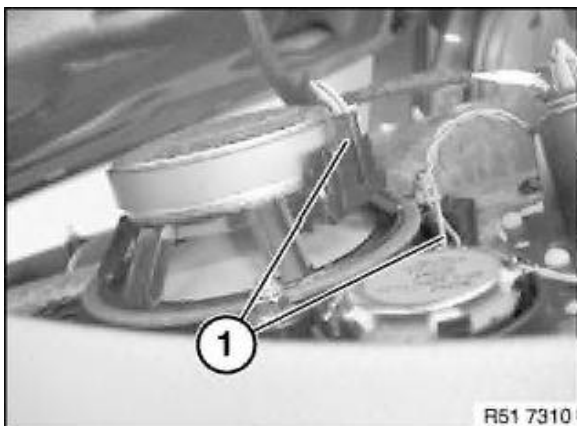

Disconnect remaining plug connections.


Version with loudspeaker:

If necessary, disconnect plug connection (1).

Remove door trim.

Installation:

Connect all plugs to original locations.

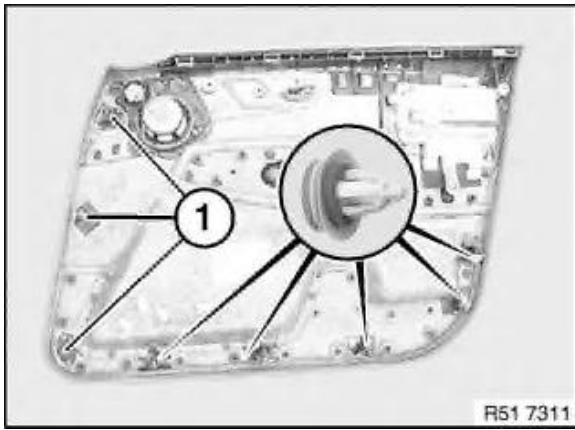


Installation:

Clips (1) are longer than the other clips.

Clips (1) are gray, the other clips are white.

Fit all clips with sealing ring.

If necessary, replace faulty clips.

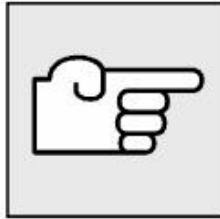

Installation:

After assembling the door trim panel proceed as follows:

- Open door window.
- Lock with vehicle key.
- Check for ease-of-movement on retaining button linkage
- If necessary, align linkages