
37 00 ... Checking air spring struts/air springs for damage

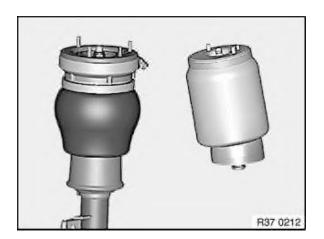

Note:

If a vehicle has been driven with depressurized air spring struts/air springs, the air spring struts/air springs must be replaced.



Lift vehicle.

Air spring strut of air spring is OK:

- 1. when the gaiter cannot be compressed by hand
- 2. when there is no discernible visible damage
- 3. when the rolling fold is uniform



Note:

If one of the above-mentioned points fails the test, then the air spring strut or air spring must be replaced.