

# Final Stage Resistor Replacement

Symptom: You lose the ability to control the fan on your heating/AC control panel and the system fan randomly fluctuates in speed.

Cause: Final Stage Resistor is defective


Solution: Replace the Final Stage Resistor -

Original Part Number 64 11 8 383 835

Replacement Part Number 64 11 6 923 204

Procedure:

Step 1: Remove the passenger side carpeted trim along the console. There is one screw in the front you have to take out and then gently pull to snap the clips out. Slide the trim to the front and work it out of its place. Once the trim piece is free, unplug the hidden 12V outlet and set this to the side. The inside of the trim piece is a reverse image of this:

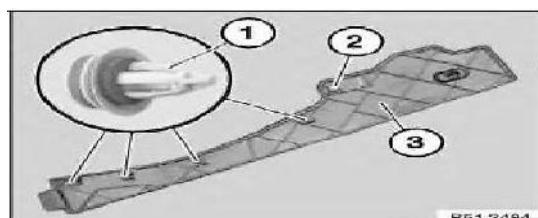


Step 2: Remove the hard plastic trim piece that is below the glove box by removing the two twist nuts and the one screw. Once the piece is free, carefully disconnect the interior light and set the trim piece aside.

Step 3: (note: several members have reported that this step can be skipped) Remove the glove box. Open the glove box and remove the 4 horizontal screws that go across the top of the glove box opening. Next remove the pin that holds the plunger on the left side. Next gently press in on the stopper on the right side of the glove box to allow it to drop to a lower position so that you can remove the vertical screws that are on each side of the glove box opening (one on each side). Carefully remove the glove box from the opening. Once it is free, disconnect the wire to the flashlight and the wire to the glove box light and set the glove box aside.

Step 4: Carefully pop off the plastic heating duct and set it aside.

Step 5: Locate the final stage resistor unit.

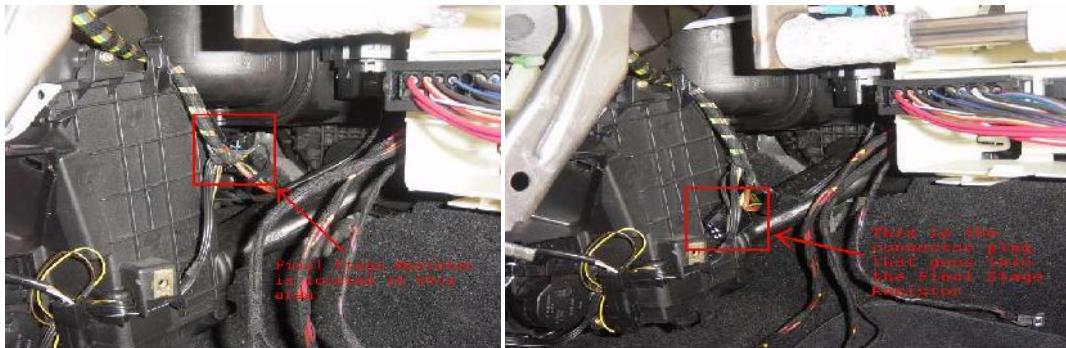

Step 6: Press in the lock tabs and unplug the cable that goes to the final stage resistor unit.

Step 7: Once the cable is unplugged, push down the lock tab that is on the lower side of the Final Stage Resistor and carefully wiggle it out.

Here is what the Final stage resistor looks like. The old one is on the left and the new one is on the right.



Step 8: Gently slide the new Final Stage Resistor into place, making sure that the lower locking tab snaps into place.

Step 9. Reconnect the cable back onto the Final Stage Resistor and do a quick check that the system is now working properly.

Step 10. Once you have verified that everything is working normally, follow the steps in reverse order to put everything back together.

Estimated time for entire project: 1 Hour

