


*Installation:*

Keep sealing faces clean and free of oil.

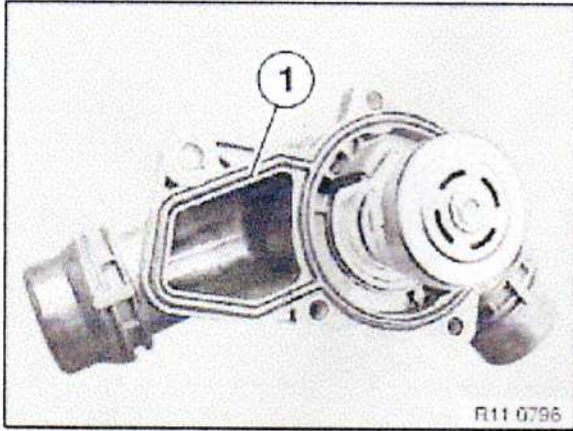

*Note:*

Coolant thermostat is integrated in coolant thermostat housing and can only be replaced as a single unit.

*Installation:*

Replace seal (1).