


Remove side trim for rear lid upper section.

Open rear lid at top.

Using special tool 00 9 317 , lever outside trim (1) on left/right with clip (2) from retainer (3) in lower trim (4).


Installation:

If necessary, replace faulty retainer (5).

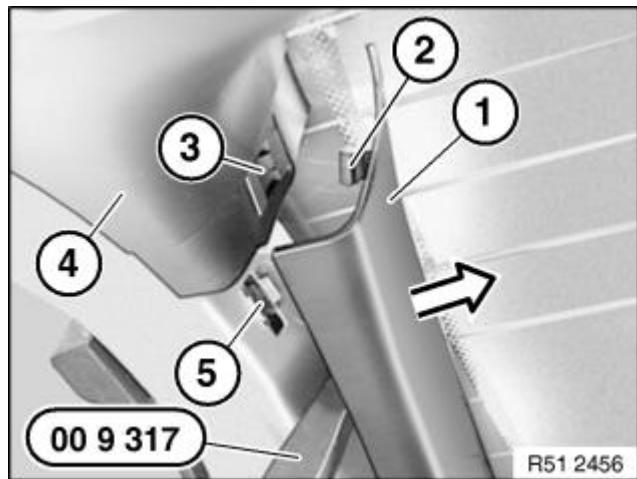


With special tool 00 9 317 , unclip clips (1) in side trim (2).

Feed trim (2) out of swallow-tail guides (3) in upper trim (4) and remove.

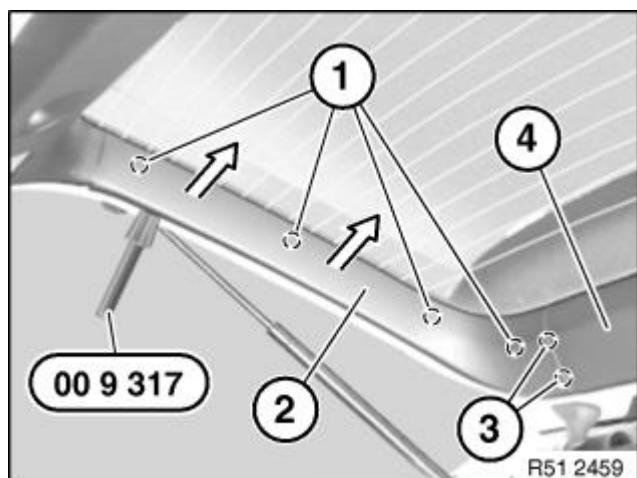

Installation:


If necessary, detach clips (1) from trim (3) and insert in rear lid. Mounts (2) must not be damaged.

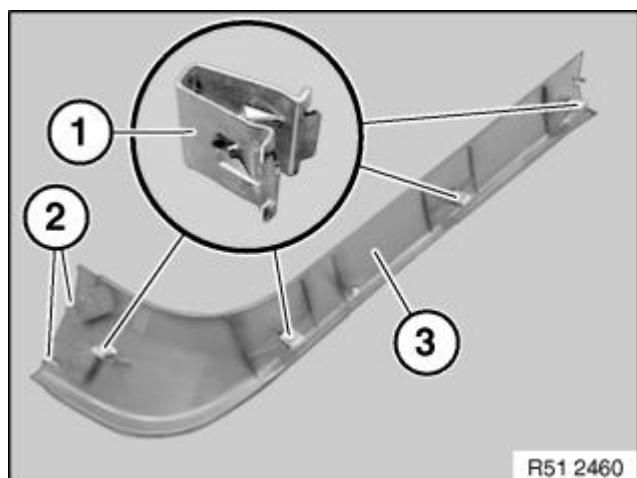

Removing and installing/replacing upper trim for rear lid upper section

With special tool 00 9 317 , unclip clips (1) in upper trim (4).

Feed trim (4) with swallow-tail guides (2) out of side trim (3).

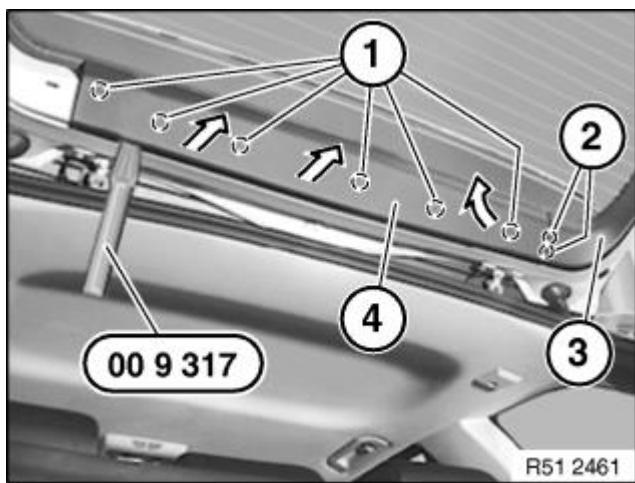

Installation:

If necessary, detach clips (1) from trim (3) and insert in rear lid.

Swallow-tail guides (2) must not be damaged.

