

13 32 051 **Replacing fuel filter (M62, M54)**



Special tools required:

- [13 3 010](#)

Switch off ignition.



Recycling

The fuel in the fuel lines is under pressure (approx. 3 to 5 bar)!


Fuel emerges when the fuel lines are disconnected from the fuel filter.

Catch and dispose of escaping fuel.

Observe country-specific waste-disposal regulations.



[Remove fuel pressure regulator.](#)

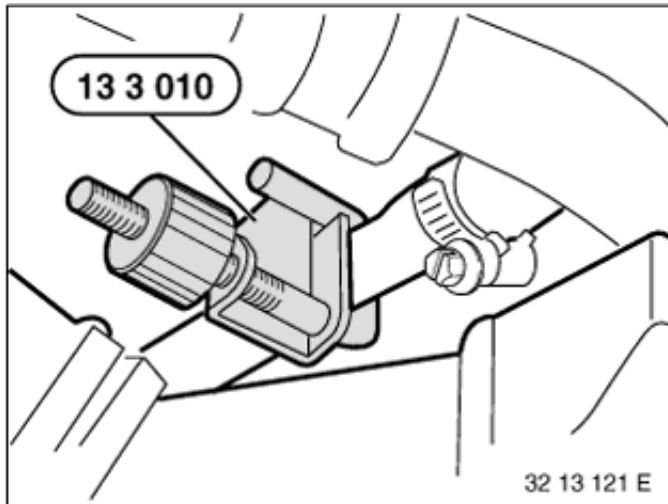

Seal fuel feed line before and after fuel filter with two special tools [13 3 010](#) .


This prevents excessive discharge of fuel from the fuel lines.



Note:

Mark fuel lines on fuel filter.

This prevents the fuel lines from being installed incorrectly on the fuel filter.

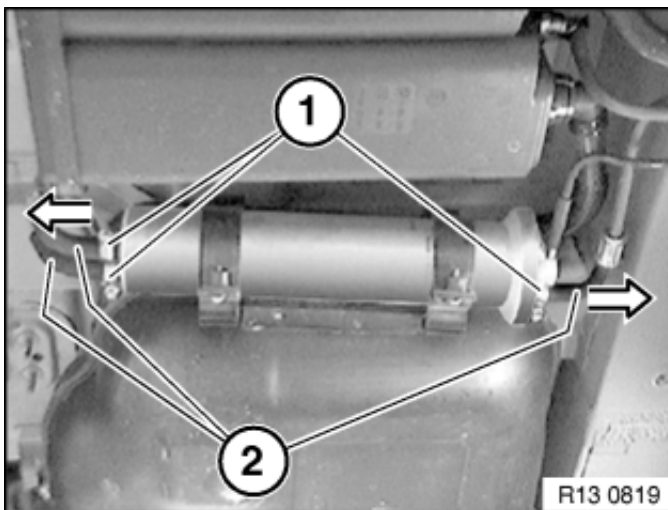


Release clips (1).

Detach fuel lines (2) from fuel filter.

Installation:

Replace clips.

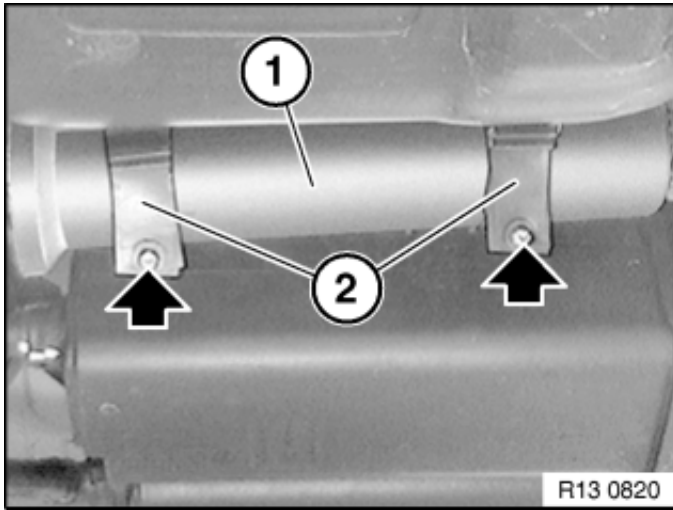

Release screws.

Remove fuel filter (1) from holders (2).

For informational purposes only. The information on this website is provided AS-IS with no warranties, express or implied, and is not guaranteed to be error-free, up-to-date or complete. NewTIS and BMW assume no liability for any loss or damage arising from the use or reliance on the information and content on this website. The content on this website is subject to change without notice.