



65 12 050 Removing and installing/replacing left or right central bass speaker

Necessary preliminary tasks:

- Remove front seat
- Lay floor carpet in working area to one side

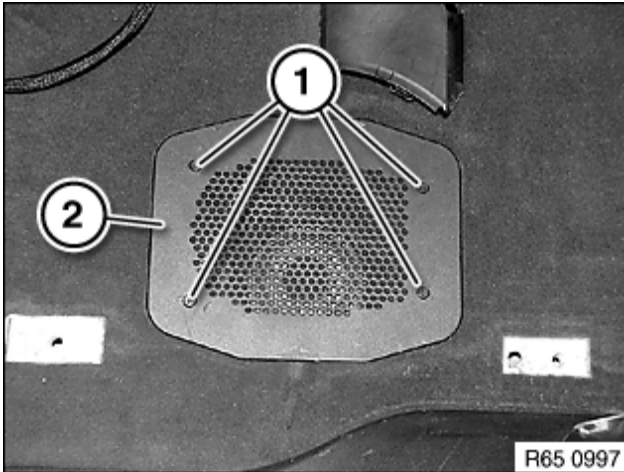

Release screws (1) and remove trim (2).

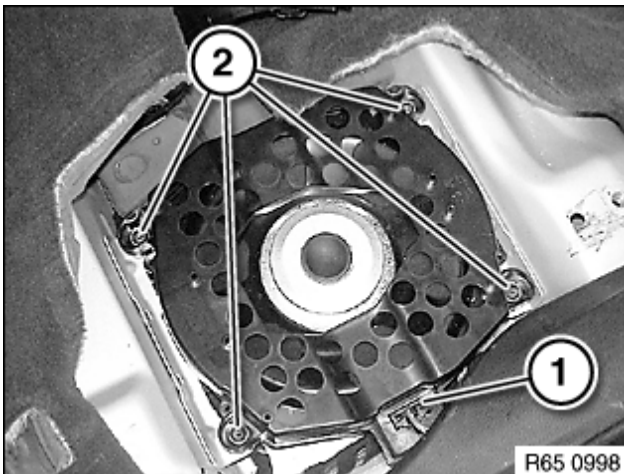

Disconnect plug connection (1).

Release screws (2) and feed out central bass speaker.

Tightening torque [65 13 2AZ](#).