


Pull off plug (1).

Release clamp (2) and detach air intake hose.

Open retainers and remove upper section of intake filter housing.

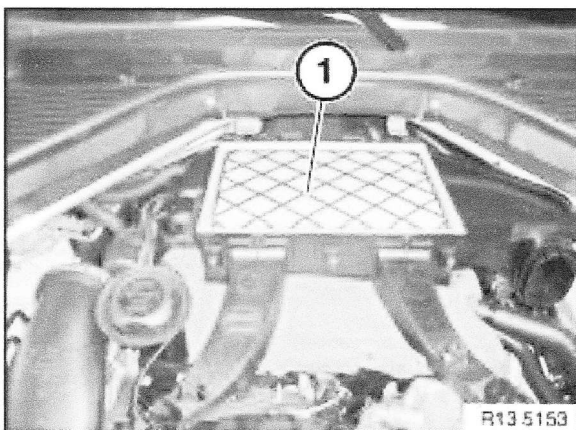

Remove air filter element (1).

**Installation:**

Clean upper and lower sections of intake filter housing from inside.

Install new air filter element.

Add final details to vehicle.