


51 11 156

**Removing and installing front bumper trim
(from 10/03)**




Special tools required:


- [00 9 317](#)

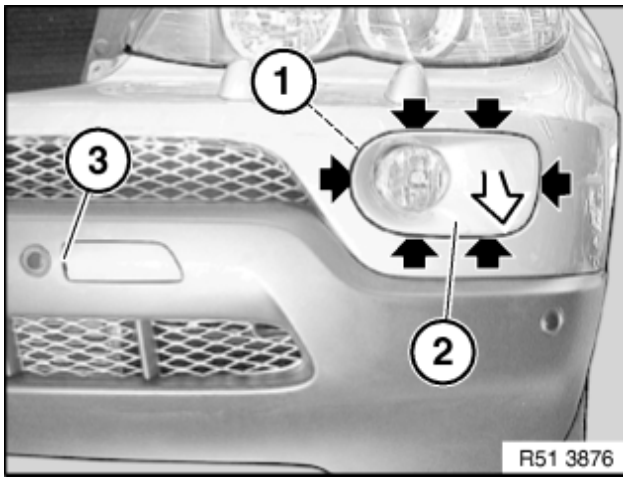


Lever out catches (1) on trim (2) with special tool [00 9 317](#).
Lever out trim (3) and remove.

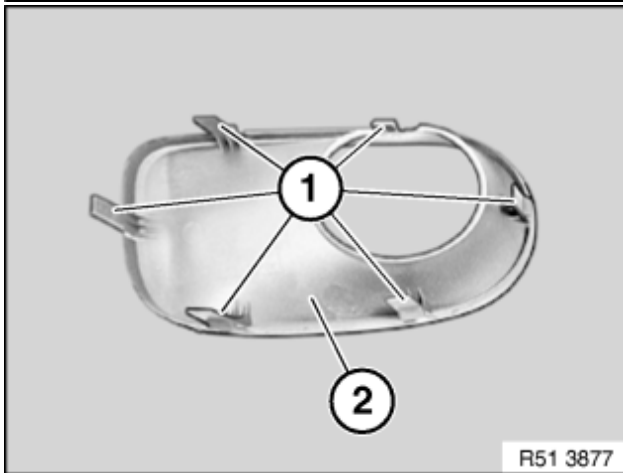


Installation:
Catches (1) on trim (2) must not be damaged.

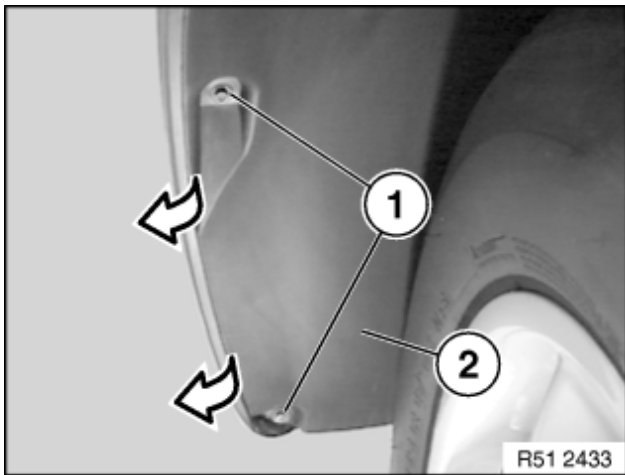

Release screws (1) on left/right and lift out wheel arch finishers (2) at side.

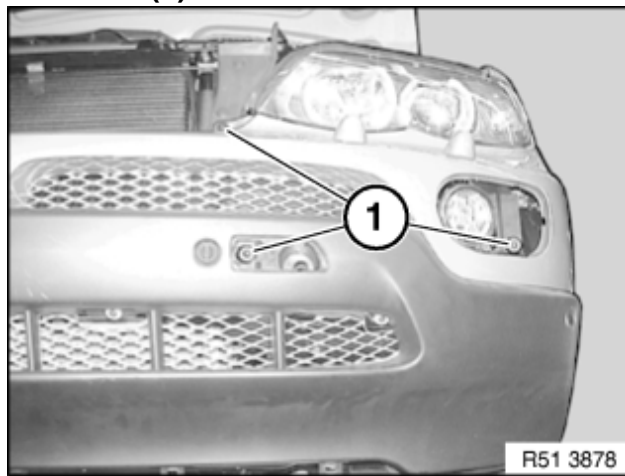


Raise hood lid.
Release screws (1) on left/right.
Installation:
Vertical adjustment, refer to [Gap dimensions, body.](#)

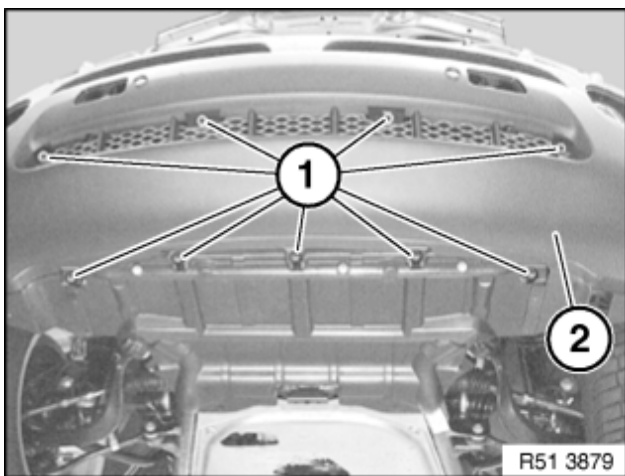


Release screws (1) on bumper trim (2).

Important!
Do not damage bumper trim when pulling off.
Pull bumper trim (1)
A)
in direction of travel to unlock catches on holder

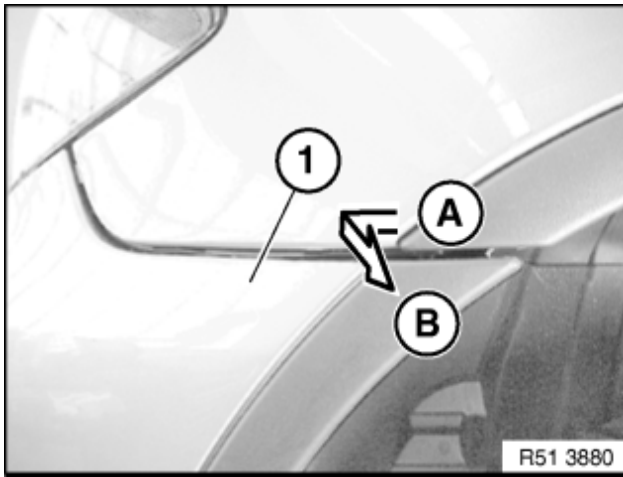

B) pull off our holder

Version without headlight cleaning system:
 Pull bumper trim (1) forwards a little.
 If necessary, disconnect plug connections on sensors and/or front fog lamps. Remove bumper towards front.

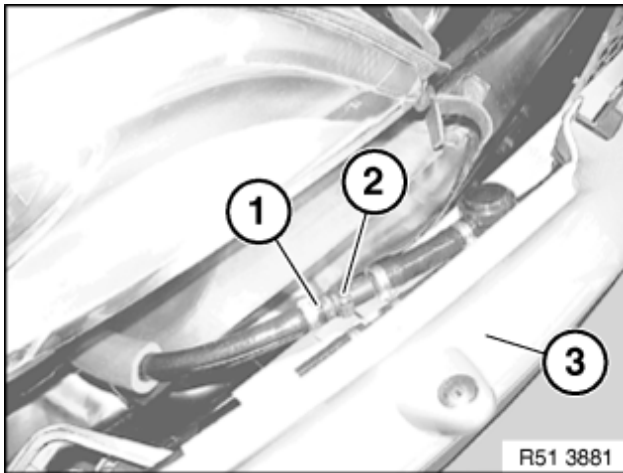

Version with headlight cleaning system:

Note:


Have a rubber plug on hand.

If necessary, pull bumper trim (3) forwards a little. Unlock hose (1), detach and seal pump outlet (2).

Remove bumper trim (1) towards front.

Installation:

Tabs (1) on bumper trim (2) must not be damaged.

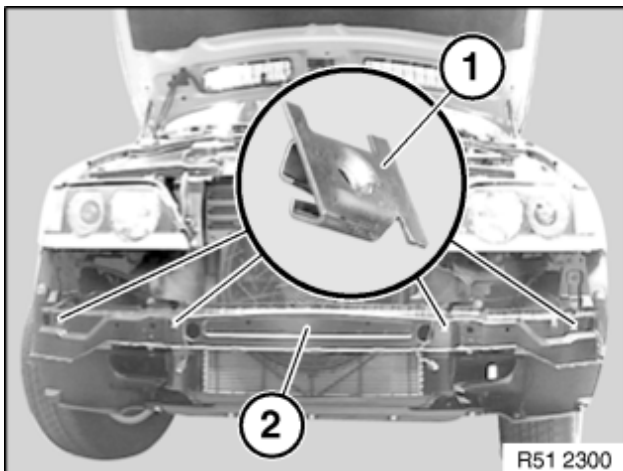

Installation:

If necessary, replace faulty retainers (1) in carrier (2).


63 12 001 Removing and installing/replacing left headlight



Necessary preliminary tasks:

- Up to 10/2003: [Remove trim from left headlight housing.](#)

From 10/2004: [Remove front trim.](#)

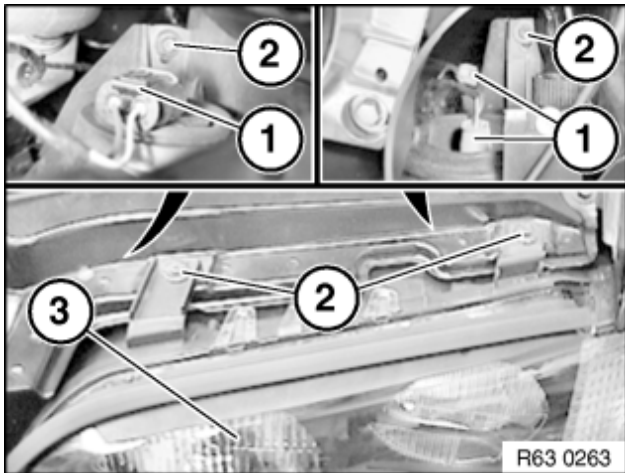

Unlock plug connections (1) and disconnect.
Release screws (2) on top and rear sides of headlight (3).
Remove headlight (3).

Installation:

- Adjust [gap dimensions](#)
- Adjust [headlights](#)

