

1. Remove the Navigation computer.
2. Unplug the voltage supply (blue connector).
3. Reconnect the voltage supply and immediately press the eject button repeatedly until the CD in the drive is ejected.
4. Insert a new Navigation CD and restart the installation process.

NEW PARTS INFORMATION

Part Number	Description
01 59 9 789 299	Navigation Software CD V17.1 Index "x"
01 59 0 141 891	Navigation Software CD V26 Index "r"

Copies of the CD V26 will be shipped to every BMW Center through the Automatic Tool Shipment Program.

[Copyright © 2005 BMW of North America, LLC]