

**Special tools required:**

- 00 9 317

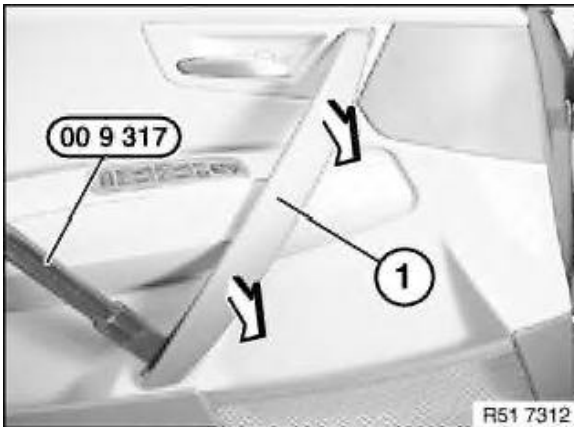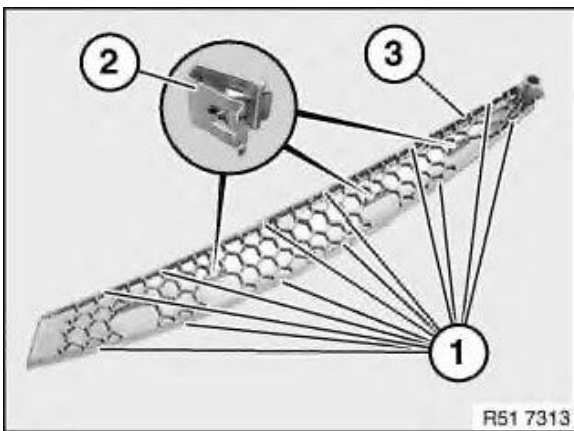

Lever out cover (1) with special tool 00 9 317 (trim panel wedge).

*Installation:*

Catches (1) and retainers (2) on cover (3) must not be damaged.