



Rewrap the connector branches and the new connection points with electrical tape (1) and place them back in the wire distribution box. Close the wire distribution box (2).

Using a multimeter, ensure that there is battery voltage and ground at the connector by switching on the ignition.

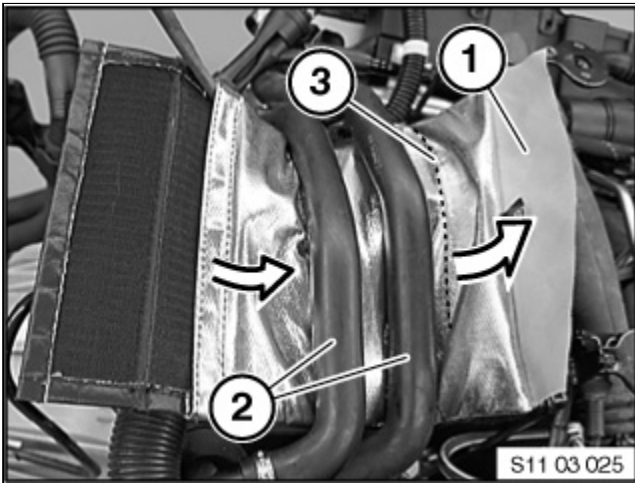

Pull the heated wrap (1) in the manner indicated under the vent hoses (2) until the black thread marking (3) can be seen. Fold the wrap tightly around the hoses and close with the Velcro strip.

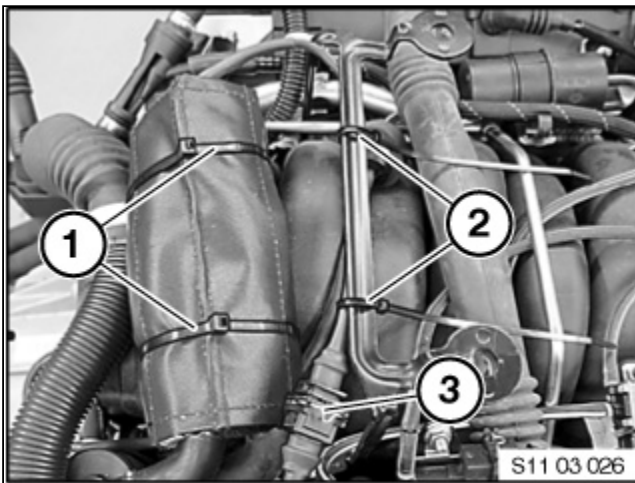

Secure the heating wrap and wiring with cable ties as shown (1&2). Connect the wiring from the wrap to the connector from the wire distribution box (3).

Reassemble the vehicle.

PARTS INFORMATION