


11. Installing and connecting Side View

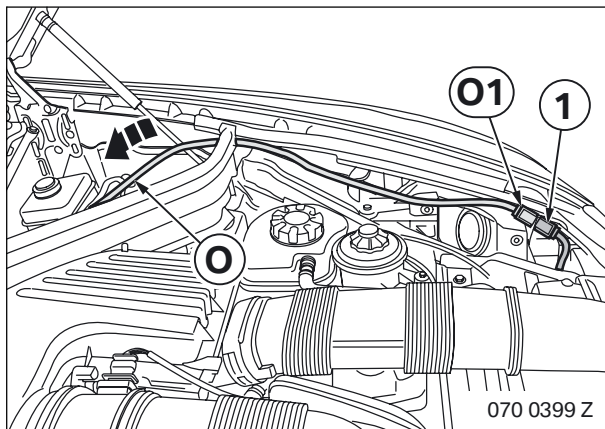


⏏ To prevent picture problems, do not connect and secure branch **01** (WS 4-pin socket casing) in the immediate vicinity of the headlight. ⚡

Route the camera cable behind the left headlight.


Connect the plug (1) on the camera cable to branch **01**.

Install the bumper trim.

Route side view wiring harness **O** to the brake booster.

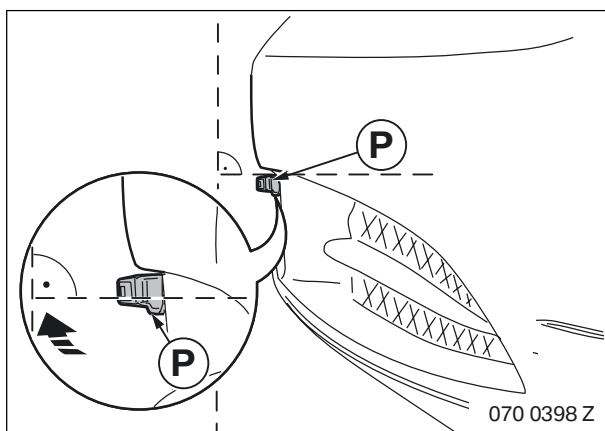


Align the side view **P** horizontally to the car's axis by carefully bending the holder.

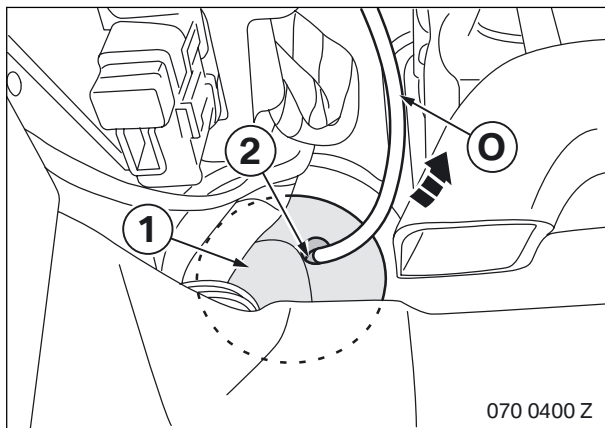

⏏ To avoid damaging the reverse brake booster, carefully drill through grommet (1). ⚡

Drill through the grommet (1) in the marked area (2) using an 15 mm step drill bit.

Route side view wiring harness **O** through the grommet (1) into the footwell.

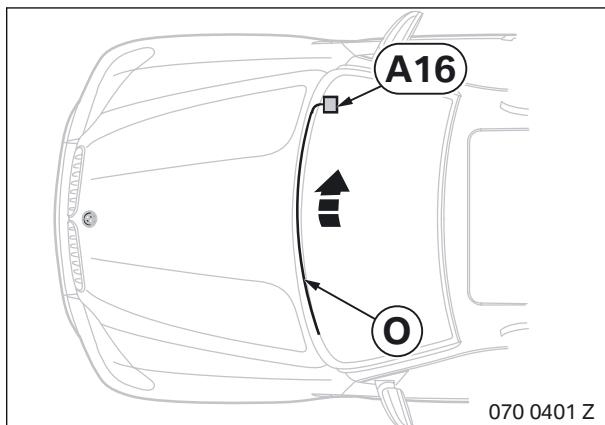

Route side view wiring harness **O** along the standard wiring harness to branch **A16** (black 18-pin plug casing) from retrofit cable ACM.