




## 5. Installing and connecting DWA wiring loom

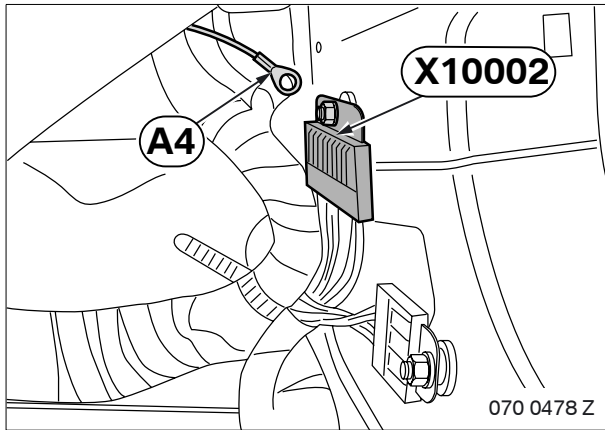


Screw down branch **A4**, BR wire, at ground terminal **X10012**.

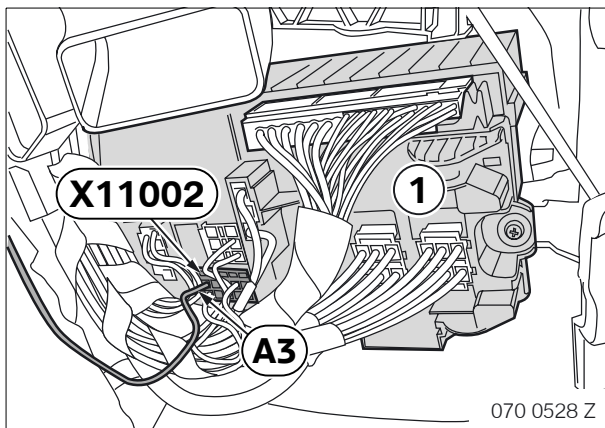

Plug in branch **A3**, RT wire, at PIN 3 of connector **X11002** (15-pin, neutral) of fuse holder (1).

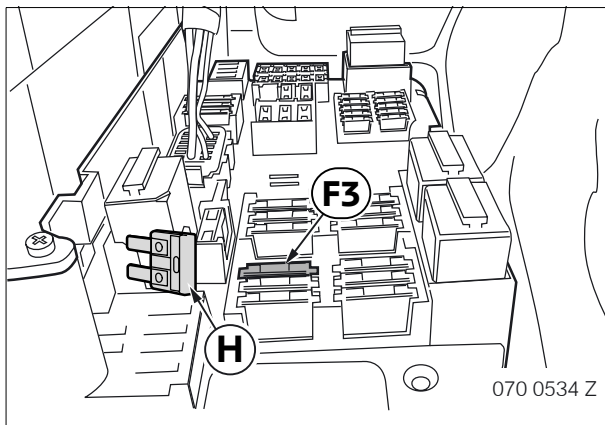

If free, plug fuse **H** into plug-in location F3 of the fuse holder.

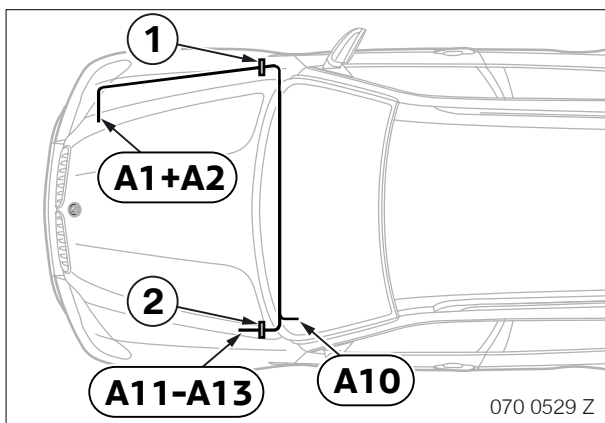

Route branches **A1-A2** and **A10-A13** along the vehicle wiring harness as follows:

- Branch **A1**, BR wire, and **A2**, VI/GN wire, through rubber grommet (1) on the right into the engine compartment
- Branch **A10**, VI/GN wire, into left footwell
- Branches **A11**, BR wire, **A12**, SW/RT wire and **A13**, RT wire, through rubber grommet (2) on the left into the engine compartment