


*Necessary preliminary tasks:*

- Remove left/right side carpets

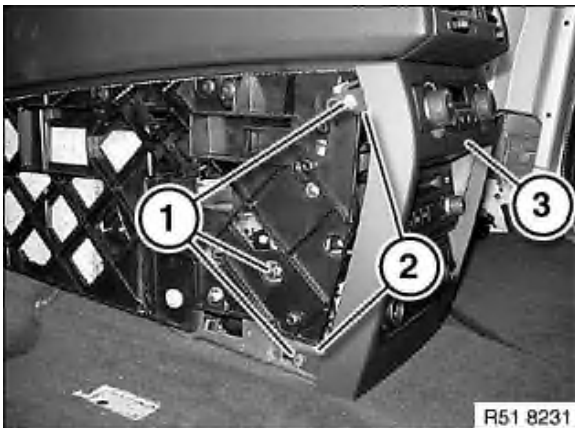


Release screws (1) on left/right.

Lift retaining tabs (2) on left/right over catches and pull out trim (3) towards rear.

*Installation:*

Pay attention to routing of cables.

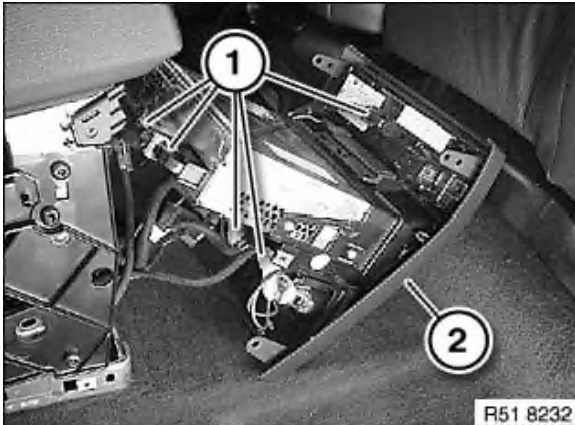

Depending on version, disconnect plug connections (1).

Remove trim (2).