

Special tools required:

• 00 9 317




Necessary preliminary tasks:

- Remove left/right side carpets
- Remove trim from centre console
- Remove trim for AV socket

Version with rear compartment monitor:

Remove trim from rear cabin monitor at front

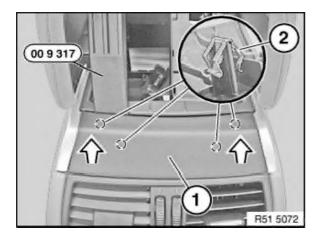


Version without rear cabin monitor:

Unclip trim (1) with special tool 00 9 317 in upward direction from retainers (2).

Installation:

If necessary, replace faulty retainer (2).

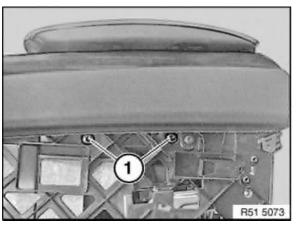

Release screws (1) on left/right.



Release screws (1) and pull out storage box (2).