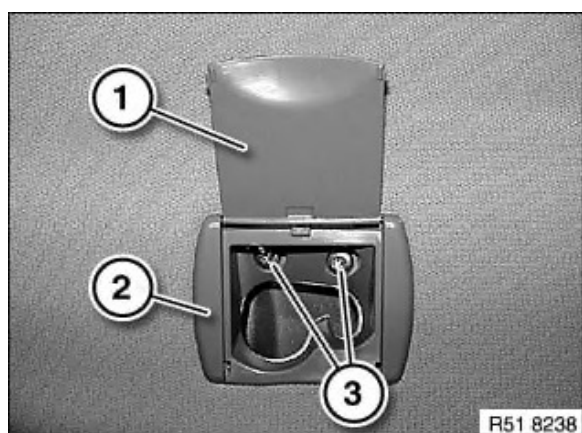
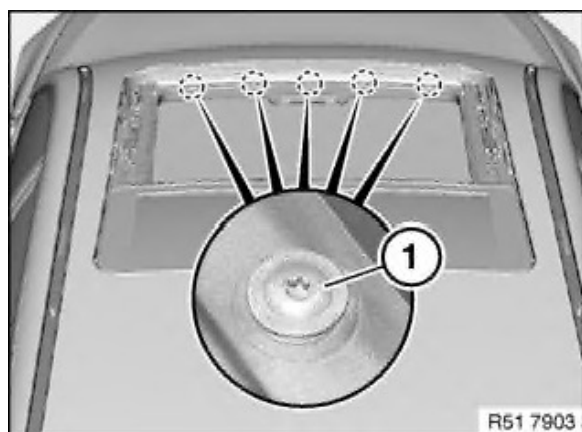
*Necessary preliminary tasks:*

- Remove glass sunroof lid at front
- Remove sun visors and counter supports on left/right
- Remove roof switch cluster
- Remove trims for roof pillar at front (A-pillar) left/right
- Remove all handles
- Remove trims for door pillar at top (B-pillar) left/right
- Remove trims for roof pillar at rear (C-pillar) left/right
- Remove trims for roof pillar at rear (D-pillar) left/right
- Remove luggage compartment wheel arch trim on passenger side

Release screws (1).



Version with roller combination (dividing net):

Fold back cover (1) for dividing net mount (2).

Release screw (3) and remove dividing net mount (2).

Installation:

Observe position indications on reverse side of dividing net mount (2).

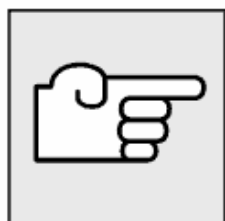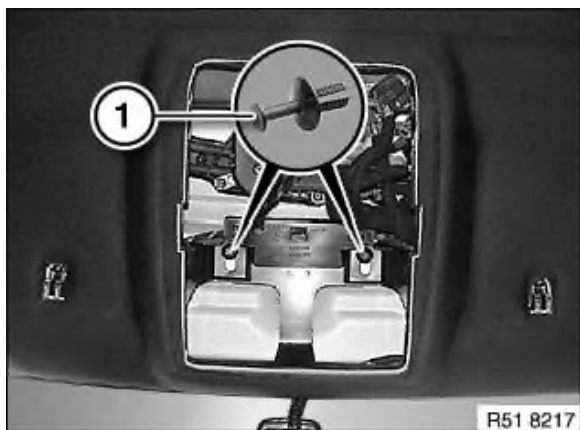


Release expansion rivet (1).

- Fold forward both rear seat backrests
- Move both front seat backrests as far back as possible
- Pull off muckets of front and rear doors in roof area

Important!

The following tasks must be carried out with a second person assisting:

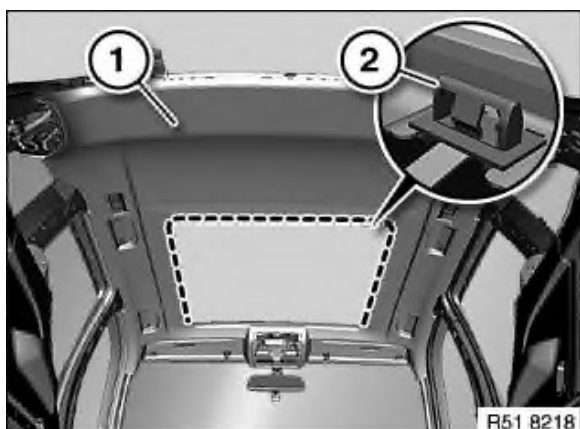


Support roofliner (1) at front.

Unclip roofliner (1) at clips (2) in sunroof frame area in downward direction.

Installation:

If necessary, replace faulty clips (2).

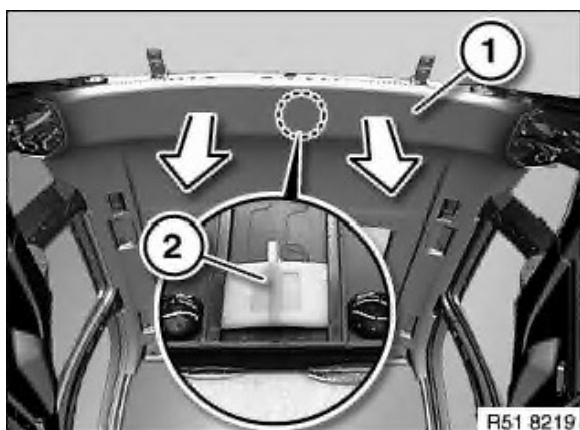



Detach rear lid mocket in area of roofliner (1).

Release clip (2) at roofliner (1) with fork lever from body roofliner.

Carefully tilt roofliner (1) and feed out towards rear.

Installation:

Clip (2) and metal retainers in body roofliner must not be damaged, replace if necessary

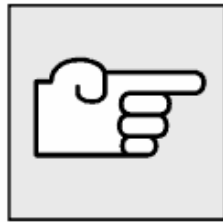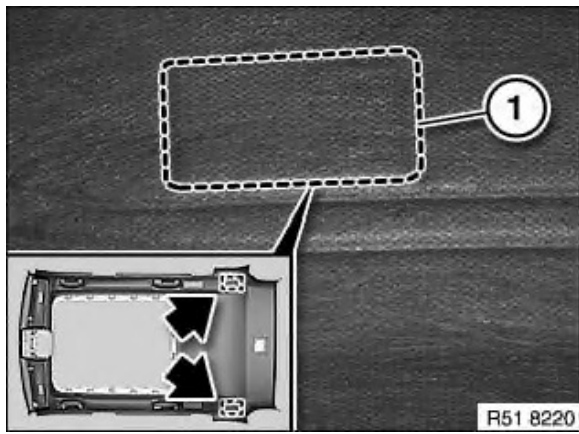

Replacement:

- Remove left/right mirror light
- Remove left/right ceiling light

Version with roller combination (dividing net):

Cut out premarked cutout areas (1) for left/right dividing net mounts with a scalpel.

Important!

Ensure a clean cut so that the headliner material is not damaged on the inside.

Installation:

Installation sequence:

1. Secure roofliner with mucket
2. Secure roofliner at front to clips
3. Snap roofliner at rear into clip
4. Secure expander rivets to roofliner at front
5. Screw down grab handles at front on left/right
6. Screw down grab handles at rear on left/right
7. Screw down sun visors and counter supports
8. Add final details to vehicle