





Release screws (1).

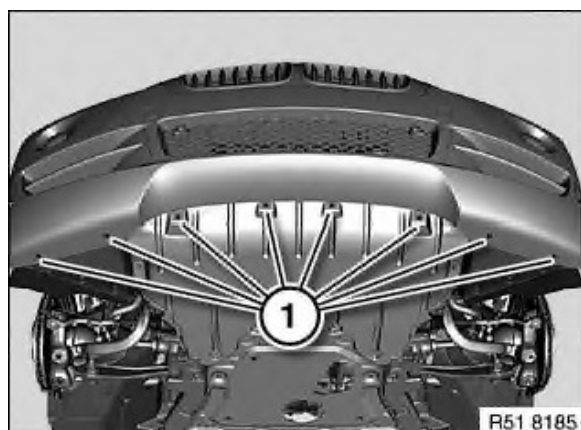


Release screws (1).

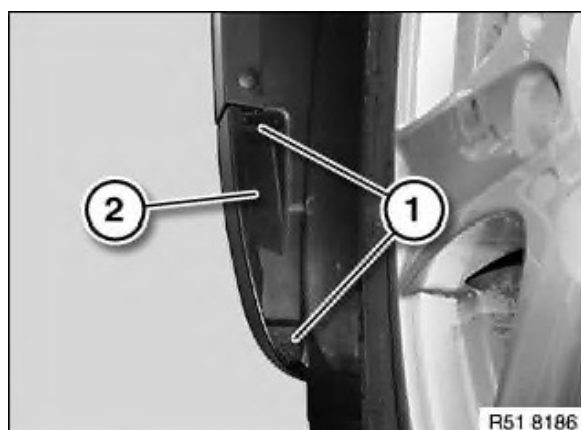


Release screws (1) on right and left on wheel arch trim (2).

*Installation:*

Make sure wheel arch trim (2) is in correct position.

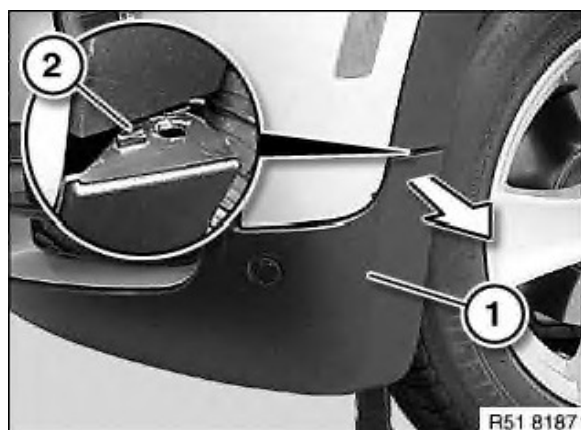

Unclip bumper trim (1) at side at catch (2).

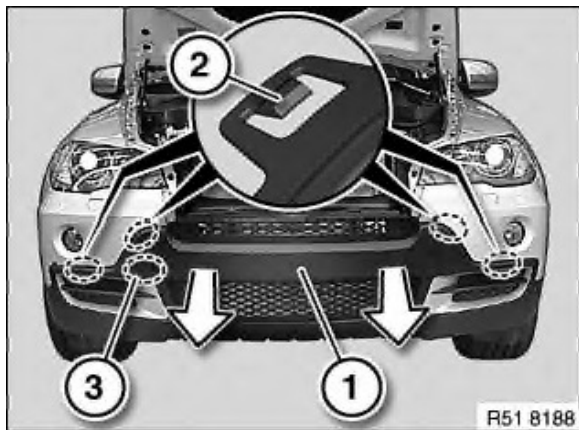

### **Important!**

Do not damage bumper trim when pulling off.

Release bumper trim (1) at catches (2).

Pull bumper trim (1) forwards slightly with a 2nd person helping; if necessary, disconnect PDC plug connection in area (3).

Remove bumper trim (1) towards front with aid of a 2nd person.

### *Installation:*

Height adjustment, refer to Gap dimensions, body.