




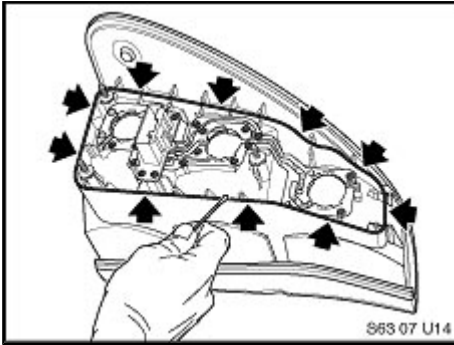


12. Using a cotton bud dipped in Teroson cleaner/thinner, clean the lamp body where it contacts the gasket.

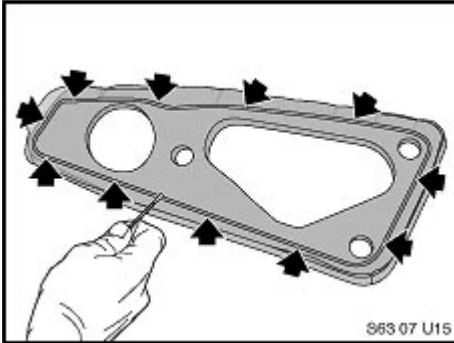

13. Using a cotton bud dipped in Teroson cleaner/thinner, clean the gasket where it contacts the lamp body.

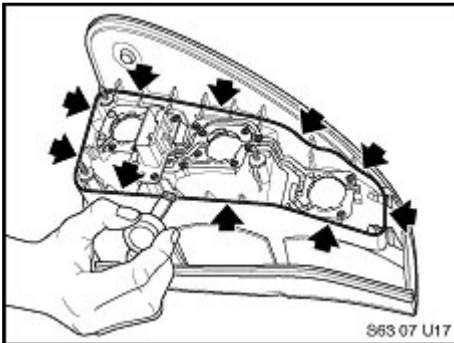

14. Apply Wurth Rubber Glue to the lamp body where it contacts the rubber gasket

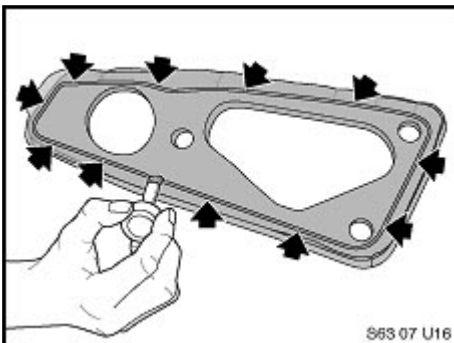

15. Apply Wurth Rubber Glue to the gasket where it contacts the lamp body.

Allow the Rubber Glue to air dry for 10-15 minutes.

16. Reinstall the gasket (1), firmly pressing the surfaces together.